

HOW YOUR PRODUCT WORKS

Install the Washer

Install the Washer following the instructions of the Product's Manual, which comes inside the Washer.

Make sure the product is leveled so it can function correctly. In case the washer cabinet contains protective film, you may remove it.

The protective film has no impact in the performance of the product.

Load your Washer with clothes

Check the labels of the clothes if they can be washed in the washer. Do not wash waterproof fabric in the Washer. Put the open clothes in the basket, distributing them evenly around the agitator.


You may choose if you want to load your Washer with or without the upper basket that goes with the product. To load the Washer without the **upper basket**, put the clothes loosely in the basket, distributing them evenly around the agitator.

To load the Washer with the **upper basket**, follow the instructions of the product Guide.

Important

- Wash the clothes that fade/transfer color in the bottom basket. To check if a fabric can fade, wet a piece of the fabric, put a white fabric (for testing purposes, one that can be stained) over it and press.
- If the color of the colored fabric impregnates the white fabric, then it means it will stain the other clothes. Wash it separately in the bottom basket.

UPPER BASKET
Dry clothes capacity: 2.5 kg

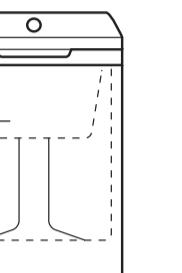


BOTTOM BASKET
Dry clothes capacity:
Washing simultaneously with upper basket: 7 kg for WWH10ATDZA; WWH18ATALN and WWH18ATDEA
Regular use without upper basket: 10 kg for WWH10ATDZA and 18 kg for WWH18ATALN and WWH18ATDEA

Load your Washer with supplies


Load the Multi-dispenser A

The Multi-dispenser is a 3-compartment drawer which stores and automatically distributes the products during the washing stages. There is a compartment for liquid bleach in the outline of the basket. Load the compartments following the instructions below:

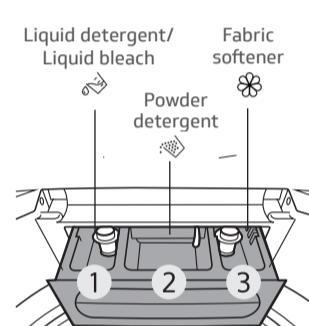

Powder detergent compartment: 2

- This compartment must be loaded only with powder detergent and/or powder bleach;
- Load the powder detergent compartment according to the selected water level. Follow the recommendation within the label of the compartment and never exceed the maximum level specified;
- Never add powder detergent directly on the clothes or they can be stained.

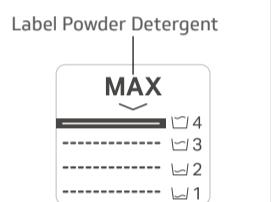

Fabric softener compartment: 3

- The use of fabric softeners is optional;
- Some fabric softeners are too viscous and may leave residue in the compartment. In that case, dilute them with water before using;
- Do not exceed the siphon's maximum level (MAX). If that happens, the siphon can release the product before the appropriate time, possibly staining the fabrics;
- The maximum level of this compartment is indicated for water LEVEL 4. Reduce the product quantity for other water levels;
- Never add fabric softener directly on the clothes or they can be stained. Always use the fabric softener dispenser.



Fabric softener compartment:

- Load fabric softener observing the indicated level (MAX);
- Never exceed the indication of maximum level of the fabric softener, or it may cause the product to be released before the appropriate time, possibly staining the clothes.

Powder/liquid detergent compartment:


- Load with detergent and/or non-chlorine bleach observing the indicated level (MAX);
- Never exceed the indication of maximum level of the detergent or it may produce excess foam and/or stain the clothes.

IMPORTANT


The location of the detergent and fabric softener compartments of the upper basket may change according to the fitting of the basket.

Set up the Washer

WWH10AT and WWH18ATD

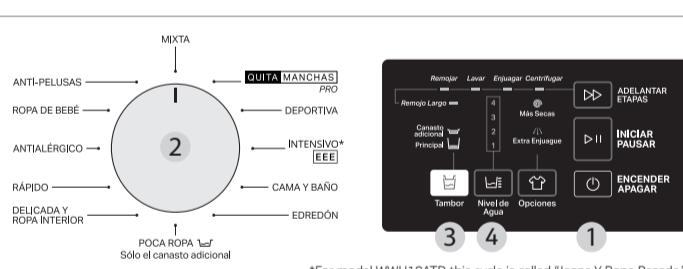

WWH18ATA

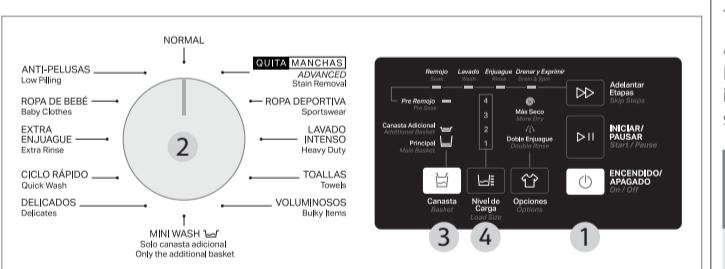

1. Press the **ON/OFF** button to turn on the Washer.

2. Choose the **Washing Program** more suitable to the type and/or soil level of the clothes.

3. Select which baskets you will use in the washing:

- >Main basket: to use only the main basket;
- Both baskets simultaneously: to use the lower and upper baskets;
- Additional basket: to use only the upper basket.

Important

- When using both baskets it is not possible to use the high water level for the bottom basket.
- It is not possible to use the special duvet program with both baskets or the upper basket.
- The water level of the Additional basket is only one and it cannot be modified.

4. In case you have selected the Main basket or both baskets simultaneously, select the water level for the bottom basket according to the ruler marking of the basket, always respecting the clothes maximum level marking for use with the Additional basket.

5. Select the most suitable program according to the table in the Guide that goes with the Additional basket.

6. Set up the additional functions according to your needs.

7. Press the **START/PAUSE** button to start washing and if you want to pause or resume the cycle during use.

Double Rinse A

To add extra rinsing in your washing program, press the button **Options A**, and leave the **light on Extra Rinse**. By doing that you enable 2 rinses for the selected program.

For Extra Rinse cycle, there are 4 rinses. It is not possible to modify the rinse quantity for the Extra Rinse cycle, thus its settings are defined by Extra Rinse. For the WWH18ATDEA model, when activating the Extra Rinse function for the Jeans Y Ropa Pesada cycle, the cycle will perform 3 consecutive rinses.

Pre Soak

For any program it is possible to add 1 hour of soaking through the stage **Pre Soak** available in the **Phases bar**. For that, press the button **Skip Steps** until the **Pre Soak** light of the **Phases** panel lights up.

More Dry

It increases the spinning time so that your clothes get less wet after washing.

Important

For safety purposes, during the washing, in case the lid is open and closed, it is necessary to press the **START/PAUSE** for the product to continue washing.

Extra Rinse

Washing cycle which seeks to promote the removal of detergent residue more efficiently, minimizing risk of skin irritation. Thus, for this program it is not possible to modify the rinse quantity (4 rinses).

Low Pilling Cycle

Cycle with special washing with gentle agitation, which reduces the piling in clothes during washing, making them looking new for longer*.

* Comparative test with Normal program performed with Jersey shirts, 94% cotton, 6% elastane, 240 g/m² grammage.

Skip Steps

To remove or add stages, press the skip steps button until the desired stage.

Aqua spray

During the filling, water jets come from the lid, helping to wet the fabrics and increasing the care with the clothes. During the filling process, the washer also slowly spins the basket.

PROGRAM

STANDARD PROGRAM

PROGRAM DURATION (Hours)**

WWH10AT WWH18ATD WWH18ATA

| PROGRAM | STANDARD PROGRAM | PROGRAM DURATION (Hours)** |
|--|---|----------------------------|
| Mixta / Normal | Wash + Rinse + Drain & Spin | 0:54 0:54 00:58 |
| Rápido / Ciclo Rápido/ Quick Wash | Wash + Rinse + Drain & Spin | 0:32 0:32 0:32 |
| Delicada y ropa interior Delicados / Delicates | Soak + Wash + Rinse + Drain & Spin | 1:18 1:18 1:18 |
| Deportiva Sportswear/ Ropa deportiva | Soak + Wash + Rinse + Drain & Spin | 1:18 1:18 1:18 |
| Anti-pelusas Low pilling/ Anti-Pelusas | Soak + Wash + Rinse + Drain & Spin | 1:27 1:27 1:27 |
| Quita Manchas Pro/ Quita Manchas Advanced/ Stain Removal | Soak + Extra Soak + Wash + Rinse + Drain & Spin | 3:02 3:02 3:02 |
| Antialérgico Extra Rinse/ Extra enjuague | Wash + Rinse + Drain & Spin | 1:37 1:37 1:41 |
| Edredón Bulky Items/ Voluminosos | Soak + Wash + Rinse + Drain & Spin | 1:38 1:38 1:38 |
| Poca Ropa/ Mini Wash | Wash + Rinse + Drain & Spin | 0:41 0:41 0:41 |
| Jeans y Ropa Pesada/ Lavado Intenso/ Heavy Duty | Soak + Wash + Rinse + Drain & Spin | - 2:13 3:02 |
| Intensivo EEE | Soak + Extra Soak + Wash + Rinse + Drain & Spin | 5:28 - - |
| Cama y baño/ Towels/ Toallas | Soak + Wash + Rinse + Drain & Spin | 1:30 1:30 1:30 |
| Ropa de Bebé/ Baby Clothes | Soak + Wash + Rinse + Drain & Spin | 1:30 1:30 1:30 |

**The times of these tables are approximate and DO NOT consider the time spent with filling and draining the product, since this time depends on the water installation of your home. The standard settings of each program have been taken into account. Before the washing stage it is possible, in any program, to add the Extra Soak (Pre Soak = + 1 hour soak with intermittent agitation).

Important performance information

Anti-unbalancing system

Your Washer has a system which identifies the clothes excessive unbalance. In case the unbalance occurs during the centrifugation, the Washer starts a special routine consisting of a new filling and agitation to try and accommodate the clothes again. This process may occur up to 2X in a row, but if after the third attempt the washer still identifies unbalance, it stops spinning and shuts down the washer.

If this occurs, turn off the washer, open the lid and redistribute the clothes evenly around the basket.

To spin again, turn on the Washer, proceed to the spinning stage.

Advanced Stain Removal Cycle

Removes more than 40 types of stains*, from the most frequent to the most difficult.

Bulky Items **

Recommended for capacity duvets up to **king**. Distribute the duvet evenly and always use LEVEL 4 (Maximum). For greater care with your duvet, the spin in this program has a lower spin speed.

Use this program to wash only duvet. Before washing your clothes, see the indication on the item label allowing washing.

During the end of the filling of this washing program, the washer performs a special agitation together with the water inlet to wet the duvet and improve the care with the article.

* Stains of extra virgin olive oil, brigadeiro, cherry juice, markers, color pens, caramel, light beer, white glue, roll-on deodorant, spray deodorant, mouthwash, grape Fanta, bacon grease, gooseberry, iodine, strawberry yogurt, crayon, mango, butter, makeup, honey, oatmeal, pink sauce, oil, toothpaste, pressed powder, papaya pulp, passion fruit pulp, strawberry ice cream, orange juice, tomato juice, margarine, dyprome (raspberry syrup), white wine, tare sauce, Yakut fermented milk, condensed milk, avocado shake (with milk), pineapple juice, white sparkling wine, strawberry ice cream topping, milk cream, hair gel, orange Fanta, and cream cheese, according to the internal stain perception test.

** Test performed with double duvet sized king 200 threads, 100% cotton fabric, 100% polyester filler and dimensions 2.6 m x 2.9 m and 3.2 kg in the standard configurations of the cycle, using the recommended amounts of powder detergent and softener.

Important

- During washing the selector remains still in the chosen program. You can track the evolution of washing through step indicator lights.
- During the supply of the washer most of the water enters through the dilution system of detergent that is not easily visible.
- During washing, if the lid is opened and closed it is necessary to press the **START/PAUSE** so that the product continues to wash.
- After filling and starting the agitation, the Washer automatically checks the amount of water according to the water level selected, and if necessary complete the level.

- Never release the water outlet hose from the clamp attached to the cabinet, as in addition to avoiding hose cuts, the clamp ensures the height required for the operation of the Washer.
- The Washer has a characteristic noise at the beginning of centrifugation that is normal for the product (change of tone during centrifugation). This change in tone is characteristic of the product and does not decrease its service life.
- Do not wash, rinse or spin clothing, covers or any other item made of waterproof fabric.
- The Washing Machine has a safety routine that moves the agitator before the start or restart of each cycle.
- If it is necessary to remove the upper basket when there is water, use two or more people.

How to clean the Washer



Dispenser Cleaning
Clean the Multi-dispenser regularly for its efficiency to be maintained.

- To remove the Multi-dispenser, pull until it stops. Following the direction of the arrow from the figure to the side, press the latch and pull the Multi-dispenser.
- Wash the Multi-dispenser with running water and a soft brush.
- Remove the siphon from the compartments by pulling it upwards. Wash with running water and a soft sponge. Then put the siphon back in the compartments.
- Clean the Multi-dispenser housing with a wet cloth.
- Place the drawer again, slightly forcing it into the housing.

Internal cleaning of the Washer (bottom basket)

Every 2 months, clean the washer internally following the 4 steps below:

- Make sure that there is no piece of clothing inside the Washer;
- Place 1/2 liter of bleach directly into the basket;
- Make the following selection on the panel:
 - 4 water level;
 - Quick Wash program;
 - Single rinse.
- Let the Washer carry out the complete washing program.

External cleaning of the Washer

To avoid damaging and increasing the life of your Washer:

- Clean the lid weekly, avoiding accumulation of debris. Never use a glass cleaner to avoid damaging the material used in the Washer;
- Use mild soap, applied with a soft cloth. Never use alcohol, removers or abrasive substances, especially on the lid, as a chemical reaction may occur, damaging the Washer;
- After each wash, wipe the softener and soap dispenser with a soft wet cloth.

Basket storage (when not in use)

In order not to damage and increase the life of the upper basket, do not leave it exposed to the sun and avoid falls and knocks.

External cleaning of the Washer

To avoid damaging and increasing the life of your Washer:

- Clean the lid weekly, avoiding accumulation of debris. Never use a glass cleaner to avoid damaging the material used in the Washer;
- Use mild soap, applied with a soft cloth. Never use alcohol, removers or abrasive substances, especially on the lid, as a chemical reaction may occur, damaging the Washer;
- After each wash, wipe the softener and soap dispenser with a soft wet cloth.

Important

Do not use water jets when cleaning your Washer, so as not to damage electrical components, which may cause short circuit or fire.

Inlet hose screen-filter cleaning

</

CÓMO FUNCIONA SU PRODUCTO

Instale el lavarropas

Instale del lavarropas siguiendo las instrucciones del Manual del Producto, que viene dentro del lavarropas.

Asegúrese de que el producto esté nivelado para su correcto funcionamiento.

Si el gabinete del lavarropas tiene una película protectora, puede quitarla. La película protectora no afecta a la funcionalidad del producto.

Llene su lavarropas de ropa

Compruebe las etiquetas de la ropa para ver si se puede lavar a máquina. No lavar los tejidos impermeables en el lavarropas.

Coloque la ropa abierta en la canasta, distribuyéndola uniformemente alrededor del agitador.

Puede elegir si llenar su lavarropas con o sin el canasto adicional que viene con el producto.

Para cargar el lavarropas **sin el canasto adicional**, coloque la ropa abierta en el canasto, distribuyéndola uniformemente alrededor del agitador.

Para llenar el lavarropas **con canasto adicional**, siga las instrucciones de la Guía que la acompaña.

Importante


- Lave la ropa que se decolora/tiene en el tambor principal. Para comprobar si una prenda destiñe, humedezca un trozo de la prenda y coloque una tela blanca (de prueba, que se pude manchar) sobre la tela de color y presione.
- Si el color de la tela de color empapa la tela blanca, significa que manchará otras prendas. Lávelo por separado en el tambor principal.

La capacidad del Lavarrropas esta sujeta a la normativa vigente del país

Llene su lavarropas con insumos


Rellenar el Multidispensador

El Multidispensador es un cajón de 3 compartimentos que almacena y dispensa automáticamente los productos durante los pasos de lavado. Para quitamanchas o blanqueador líquido hay un compartimento en el borde de la canasta. Rellene los compartimentos según las siguientes instrucciones:

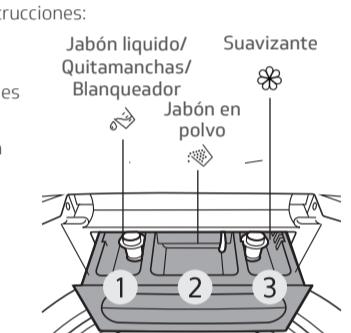


Compartimiento para el jabón en polvo: ②

- Este compartimento sólo debe llenarse con detergente en polvo o blanqueador en polvo;
- Llene el compartimento de jabón en polvo según el nivel de agua seleccionado. Siga las recomendaciones de la etiqueta del interior del compartimento y no supere nunca el nivel máximo indicado;
- Nunca ponga el detergente directamente sobre la ropa, ya que podría mancharla.

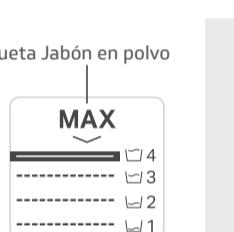


Compartimiento para el suavizante: ③

- El uso de suavizante es opcional;
- Algunos suavizantes son muy viscosos y pueden dejar residuos en el compartimento. En este caso, dilúyelos con un poco de agua antes de usarlos;
- No superar el nivel máximo (MAX) del sifón. Si esto ocurre, el sifón puede dispensar el producto antes del tiempo adecuado y puede manchar los tejidos;
- El nivel máximo de este compartimento está indicado para el agua de NIVEL 4. Reducir la cantidad de producto para los otros niveles de agua;
- Nunca ponga el suavizante directamente sobre la ropa, ya que podría mancharla. Utilice siempre el dispensador de suavizante.

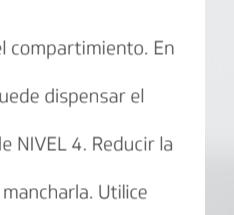


Dispensador de canasto adicional (rellenar si se utiliza el canasto adicional)

El canasto adicional tiene compartimentos para el jabón y el suavizante, que almacenan y distribuyen automáticamente los productos durante las fases de lavado.

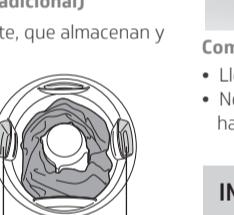

Compartimiento para el jabón en polvo/líquido:

 - Llenar con jabón y/o blanqueador no clorado, respetando el nivel indicado (MAX);
- No supere nunca la indicación del nivel máximo de jabón, ya que puede generar un exceso de espuma y/o manchar la ropa.



Compartimiento para el suavizante:

- Llenar con suavizante, observando el nivel indicado (MAX);
- No supere nunca el nivel máximo de suavizante indicado, ya que puede hacer que el producto se disperse antes de tiempo y manche la ropa.




IMPORTANTE

La ubicación de los compartimentos para el jabón y el suavizante en la canasta superior puede cambiar según el montaje del canasto.

Programar el lavarropas

WWH10AT Y WWH18ATD

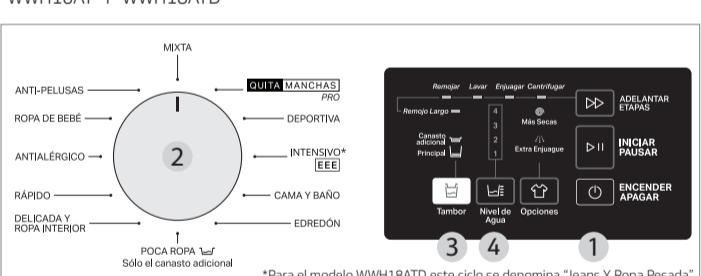

1. Presione la tecla **ENCENDER/APAGAR** o **ENCENDIDO/APAGADO** para encender el lavarropas.

2. Elija el **Ciclo de Lavado** que mejor se adapte al tipo y/o nivel de suciedad de la ropa.

3. Seleccione los tambores que utilizará para el lavado:

✓ Tambor Principal: para utilizar sólo el canasto principal.


✗ Los dos canastos simultáneamente: para utilizar el Canasto inferior y el adicional.

✗ Canasto adicional: para utilizar sólo el canasto adicional (superior).

Importante

- Cuando se utilizan los dos canastos, no es posible utilizar el nivel de agua alto para el tambor principal.
- No es posible utilizar el ciclo especial de edredones con los dos canastos o el canasto adicional.
- El nivel de agua en el canasto adicional es único y no se puede modificar.

WWH18ATA

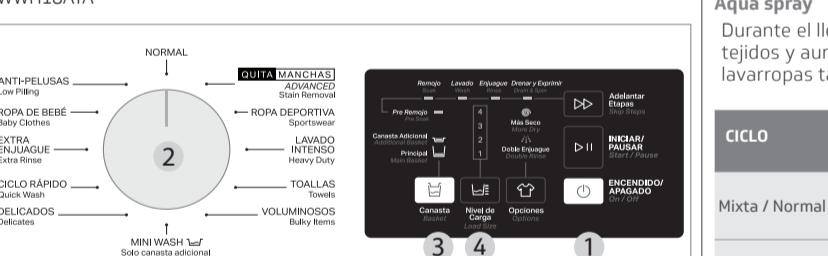

Extra Enjuague / Doble Enjuague /:

Para añadir enjuagues adicionales a su lavado, simplemente haga clic en el botón **Opciones**, y deje la luz de **Extra Enjuague encendida**. De este modo, se habilitan 2 enjuagues para el ciclo seleccionado.

Para el **Ciclo Antialérgico / Extra Enjuague** no es posible modificar el número de enjuagues. Su ajuste está definido por Extra Enjuague.

Remojo Largo / Pre Remojo

Para cualquier ciclo es posible añadir 1 hora de remojo a través del paso **Remojo largo / Pre Remojo** disponible en la **barra de pasos**. Para ello, pulse el botón **Adelantar Etapas** hasta que se encienda la luz de Remojo Largo **Remojo largo / Pre Remojo** en el panel de **Pasos**.

Importante

- Cuando se utilizan los dos canastos, no es posible utilizar el nivel de agua alto para el tambor principal.
- No es posible utilizar el ciclo especial de edredones con los dos canastos o el canasto adicional.
- El nivel de agua en el canasto adicional es único y no se puede modificar.

Ciclo Antialérgico / Piel Sensible

Ciclo de lavado diseñado para eliminar los residuos de jabón de forma más eficiente, minimizando el riesgo de irritación de la piel. Por lo tanto, para este ciclo no es posible modificar el número de enjuagues (4 enjuagues).

Ciclo Anti-Pelusas

Ciclo de lavado especial con agitación suave que reduce la formación de pelusas en la ropa durante el lavado, manteniéndola como nueva durante más tiempo*.

*Prueba comparativa con el ciclo Normal / Mixta realizada con tejidos nuevos de punto medio (Jersey) de 94% algodón y 6% elástano.

Adelantar etapas

Para eliminar o añadir etapas, pulse la tecla de avanzar etapas hasta la etapa deseada.

Aqua spray

Durante el llenado salen chorros de agua de la tapa, ayudando a mojar los tejidos y aumentando el cuidado de la ropa. Durante este proceso de llenado el lavarropas también hace girar lentamente el tambor.

CICLO

CICLO ESTÁNDAR

TIEMPO DE CICLO (Horas)**

WWH10AT

WWH18ATD

WWH18ATA

| Mixa / Normal | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 0:54 | 0:54 | 0:05:08 |
|--|---|------|------|---------|
| Rápido / Ciclo Rápido / Quick Wash | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 0:32 | 0:32 | 0:32 |
| Delicada y Ropa Interior / Delicates | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:18 | 1:18 | 1:18 |
| Deportiva / Sportswear / Ropa deportiva | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:18 | 1:18 | 1:18 |
| Anti-pelusas / Anti-Pelusas | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:27 | 1:27 | 1:27 |
| Quita Manchas Pro / Quita Manchas Advanced / Stain Removal | Remojo + Remojo Largo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 3:02 | 3:02 | 3:02 |
| Antialérgico / Extra Rinse / Extra enjuague | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:37 | 1:37 | 1:41 |
| Edredón Bulky Items / Voluminosos | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:38 | 1:38 | 1:38 |
| Poca Ropa / Mini Wash | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 0:41 | 0:41 | 0:41 |
| Jeans y Ropa Pesada / Lavado Intenso / Heavy Duty | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | - | 2:13 | 3:02 |
| Intensivo EEE | Remojo + Remojo Largo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 5:28 | - | - |
| Cama y baño / Towels / Toallas | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:30 | 1:30 | 1:30 |
| Ropa de Bebé / Baby Clothes | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:30 | 1:30 | 1:30 |

TIEMPO DE CICLO (Horas)**

WWH10AT

WWH18ATD

WWH18ATA

| Mixa / Normal | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 0:54 | 0:54 | 0:05:08 |
|--|---|------|------|---------|
| Rápido / Ciclo Rápido / Quick Wash | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 0:32 | 0:32 | 0:32 |
| Delicada y Ropa Interior / Delicates | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:18 | 1:18 | 1:18 |
| Deportiva / Sportswear / Ropa deportiva | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:18 | 1:18 | 1:18 |
| Anti-pelusas / Anti-Pelusas | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:27 | 1:27 | 1:27 |
| Quita Manchas Pro / Quita Manchas Advanced / Stain Removal | Remojo + Remojo Largo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 3:02 | 3:02 | 3:02 |
| Antialérgico / Extra Rinse / Extra enjuague | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:37 | 1:37 | 1:41 |
| Edredón Bulky Items / Voluminosos | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:38 | 1:38 | 1:38 |
| Poca Ropa / Mini Wash | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 0:41 | 0:41 | 0:41 |
| Jeans y Ropa Pesada / Lavado Intenso / Heavy Duty | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | - | 2:13 | 3:02 |
| Intensivo EEE | Remojo + Remojo Largo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 5:28 | - | - |
| Cama y baño / Towels / Toallas | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:30 | 1:30 | 1:30 |
| Ropa de Bebé / Baby Clothes | Remojo + Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 1:30 | 1:30 | 1:30 |

TIEMPO DE CICLO (Horas)**

WWH10AT

WWH18ATD

WWH18ATA

| Mixa / Normal | Lavado + Enjuague + Centrifugar / Drenar y Exprimir | 0:54 | 0:54 | 0:05: |
| --- | --- | --- | --- | --- |